



Congratulations on choosing our **Fysiowalker**. The user manual has been written to enable you, the customer, to enjoy the full benefits of the product. Please read the instructions carefully before assembling the product and using it.

The contents of the manual are as follows:

- A. Unpacking/installation instructions
- B. Safety information
- C. Operating instructions
- D. Maintenance and inspection
- E. Charging
- F. Technical specifications
- G. Spare parts list

A. Unpacking/installation instructions

- 1. Check the product for transport damage.
- 2. Assemble the product in accordance with the instructions.
- 3. Adjust the brake.
- 4. Familiarise yourself with the product's various adjustment options.

B. Safety information:

- 1. If the walker is damaged or defective, it **MUST NOT BE USED** until it has been repaired.
- 2. The walker is intended for indoor use only.
- 3. The walker must not be loaded with more than the specified maximum user weight.
- 4. Take care not to trap anything when adjusting the walker.

C. Operating instructions

- 1. Walker with gas spring:
 - i. The height can be adjusted using the lever at the front between the arm cushions. Lifting releases the gas, allowing the correct walking height to be set.
 - ii. To adjust the width of the arm cushions, undo the knob under the cushion and set the correct width. Remember to tighten the knob properly after making the adjustment.
 - iii. The brake can be adjusted at the entry for each cable. The cable can be tightened at the lever itself and for each individual leg at the front under the painted T-piece.
 - iv. The easiest way to adjust the width of the legs is by laying the walker on the floor. Undo the screws visible underneath the walker completely and adjust the legs to the required width. Remember to put both screws back and tighten them properly after making the adjustment.

2. Walker with electrical adjustment:

- i. To adjust the height, press the “red” and “green” button on each handle. Green is up and red is down.
- ii. To adjust the width of the arm cushions, undo the knob under the cushion and set the correct width. Remember to tighten the knob properly after making the adjustment.
- iii. The brake can be adjusted at the entry for each cable. The cable can be tightened at the lever itself and for each individual leg at the front under the painted T-piece.
- iv. The easiest way to adjust the width of the legs is by laying the walker on the floor. Undo the screws visible underneath the walker completely and adjust the legs to the required width. Remember to put both screws back and tighten them properly after making the adjustment.

D. Maintenance and inspection:

1. After 1 month of use:
 - i. Make sure that all the screws are done up properly.
 - ii. Adjust the brake so that it is applied equally to both wheels at the same time.
2. Every three months:
 - i. Perform the checks described under point 1.
 - ii. Make sure that there is no wear and tear that might reduce the functionality of the product.
 - iii. Check stability.
3. Recycling:
 - i. The product should be disposed of as special waste or returned to the importer.
4. Washing the cushions:
 - i. The cushions are made from moulded polyurethane foam and so have no seams where dust and dirt can collect. The cushion material is stable and tear-proof, and grease, like dirt, can easily be wiped off with disinfectant. The cushions are simple to change if necessary.

E. Charging

1. To charge the walker, remove the battery pack and put it in the charger. Always connect the charger first, followed by the plug from the power source. When charging is complete, disconnect the charger first and then the battery pack.
2. The battery is normally fully charged on delivery, but should be allowed to charge overnight before use.
3. Charging should always be done at room temperature.
4. To achieve maximum battery life, discharge the battery completely before fully recharging it the first few times.

F. Technical specifications:

Adult Walker	Gas	Electric
Height min/max:	88 cm/131 cm	88 cm/131 cm
Leg width, min/max:	70 cm/85 cm	70 cm/85 cm
Arm width, min/max:	53 cm/76 cm	53 cm/76 cm
Length:	77.5 cm	77.5 cm
Weight:	19.8 kg	22.5 kg
Max. load:	175 kg	175 kg

Child Walker	Gas
Height min/max:	74 cm/108 cm
Leg width, min/max:	66 cm/81 cm
Arm width, min/max:	52 cm/76 cm
Length:	65cm
Weight:	19.8 kg
Max. load:	175 kg

